


# VIDEO DOOR PHONE

Model No. DPV-4HP2

**COMMAX**  
Blooming Life, HomeNetwork

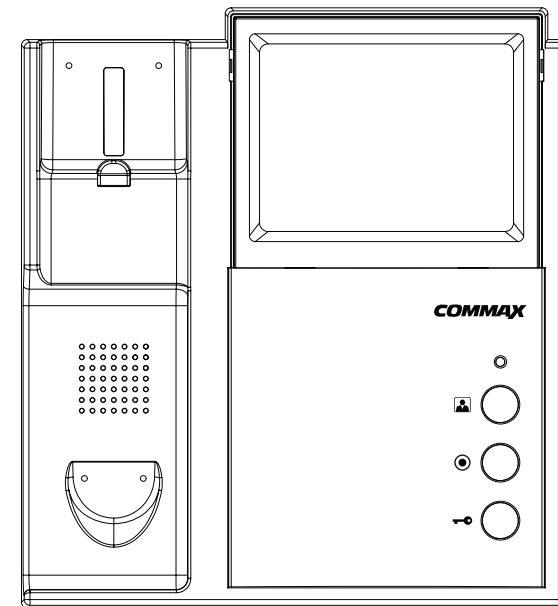

## COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea  
Int'l Business Dept. : Tel.; +82-31-7393-540~550 Fax.; +82-31-745-2133  
Web site : www.commax.com

Printed In Korea / 2008.11

## COMMAX Co.,Ltd.

- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

# Table of Contents

<b>Table of Contents</b> .....	<b>1</b>
<b>Warnings and caution</b> .....	<b>2</b>
<b>1. Parts Names &amp; Functions</b> .....	<b>4</b>
<b>2. Operation</b> .....	<b>5</b>
<b>3. Installation Method</b> .....	<b>6</b>
<b>4. Wiring</b> .....	<b>7</b>
<b>5. Parts list</b> .....	<b>8</b>
<b>6. Specifications</b> .....	<b>9</b>

# Warnings and caution

◎ Make sure to follow the instructions to prevent any danger or property losses.




**Warning** Death or serious injury is expected.


- It indicates prohibition.
- It indicates prohibition of disassembly.
- It indicates prohibition of contact.
- It indicates dos and don'ts.
- It indicates that the plug should be pulled out from the socket.




**Warning**

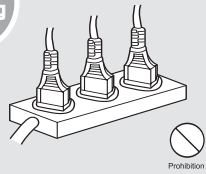


**Do not put the plug in the socket simultaneously.**  
It may generate abnormal heat or cause a fire.

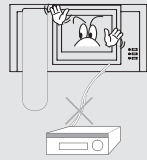


**Do not connect to other products while in use.**  
It may cause breakdown.

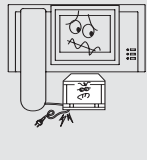

**Do not forcibly bend the cord or put a heavy object on the product.**  
It may cause a fire.

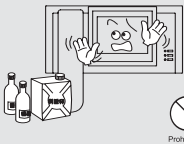


**Do not use water, thinner or a detergent used to wash oil products when you wash the exterior.**  
Make sure to wash it by using a dry cloth to prevent any breakdown or electric shock.

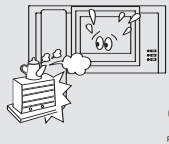


**Do not install the product in a humid place.**  
It may cause an electric shock or a fire.



**Do not forcibly pull out the cord from the socket.**  
If the cord is damaged, it may cause a fire or an electric shock.

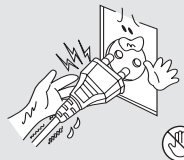

**Do not put the plug in the socket with a wet hand.**  
It may cause an electric shock.

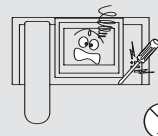

**Do not disassemble, repair or modify the product.**  
It may cause a fire, an electric shock or an injury due to malfunction of the product.



**Do not use AC circuit breaker.**  
It may cause an electric shock.

# Warnings and caution




**Caution** An injury or property losses are expected


- It indicates prohibition.
- It indicates prohibition of disassembly.
- It indicates prohibition of contact.
- It indicates dos and don'ts.
- It indicates that the plug should be pulled out from the socket.




**Caution**

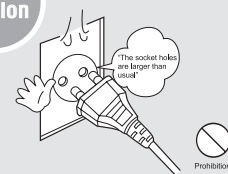


**If the socket holes are larger than normal, do not put the plug.**  
It may cause an electric shock or a fire.

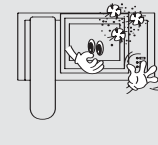


**Make sure that dust or foreign substances are not gathered on the product.**

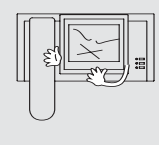


**Make sure to prevent foreign substances from entering the product.**  
It may cause a breakdown.

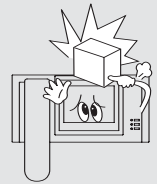


**Do not put a heavy object on the product.**  
It may cause a breakdown.

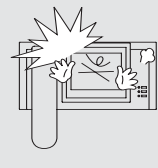


**Do not disassemble or give an impact to the product.**

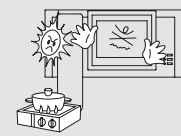


**Avoid direct rays of the sun or heating devices at a time of installation.**

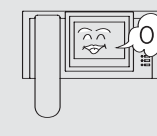

**Install the product in a flat and stable place.**  
Otherwise, it may not function properly.

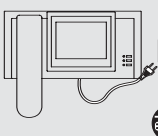


**Pull the plug if the product is not used for a long time.**

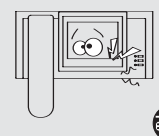

**If the product generates strange sound, make sure to pull the plug immediately and contact Commax service center.**


# 1. Parts Names & Functions

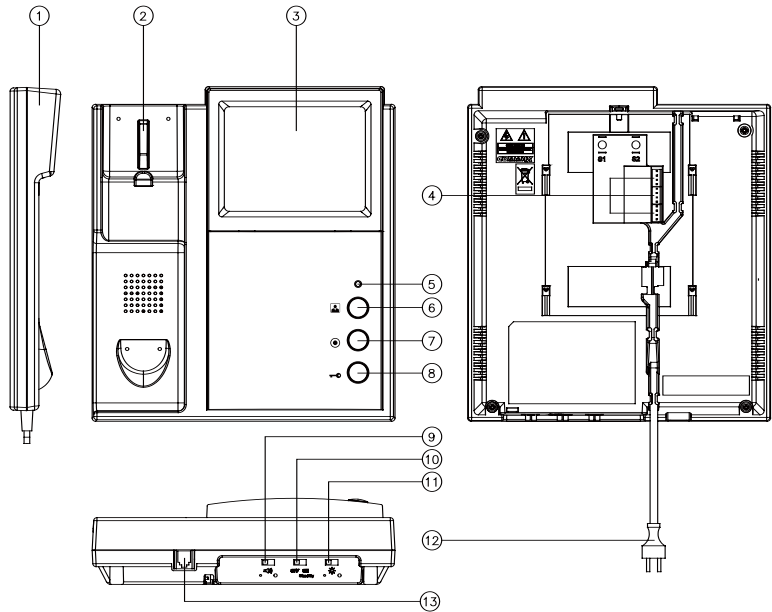


No.	Name	Description
1	Handset	
2	Hook Switch	
3	Monitor Screen	
4	Connection Terminal	Connect the Camera and the Interphone
5	LED	Power Status and the camera indication.
6	Monitor Button	Press the button when the householder wants to see the front door situation
7	Interphone Button	Call the Interphone after picking up a handset.
8	Door Release Button	When this button is pressed, while communication between a monitor and a camera unit, the door is opened.
9	Volume control switch.	Control the volume
10	Power On/Off Switch	On/off power.
11	Brightness Control Switch	Control the Brightness.
12	AC Powercode	
13	Handset Connector Socket	Connect Handset after installation

# 2. Operation


## 1. Calling from a Camera unit.( In case of install a camera)

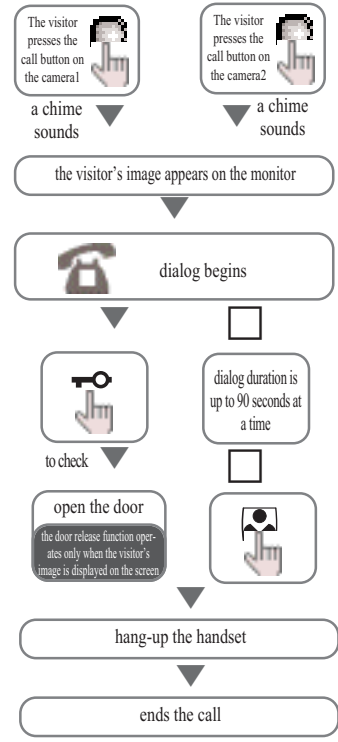

※ A view of the front door can be seen anytime the entrance button is pressed and a dialog can be made with anyone at the front door.

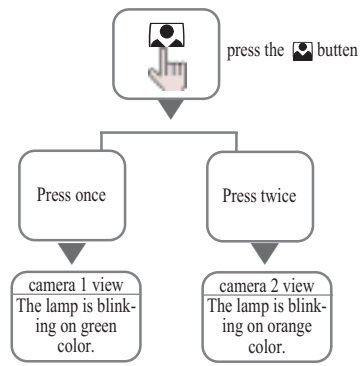


## 2. Communication with the optional Interphone

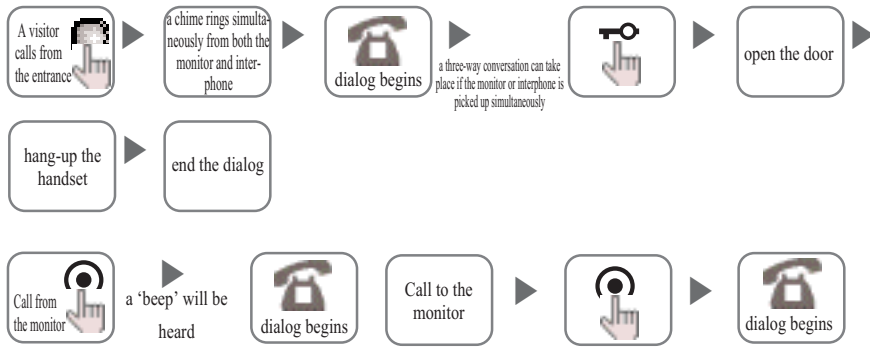

## 3. Installation Method.

### Monitor

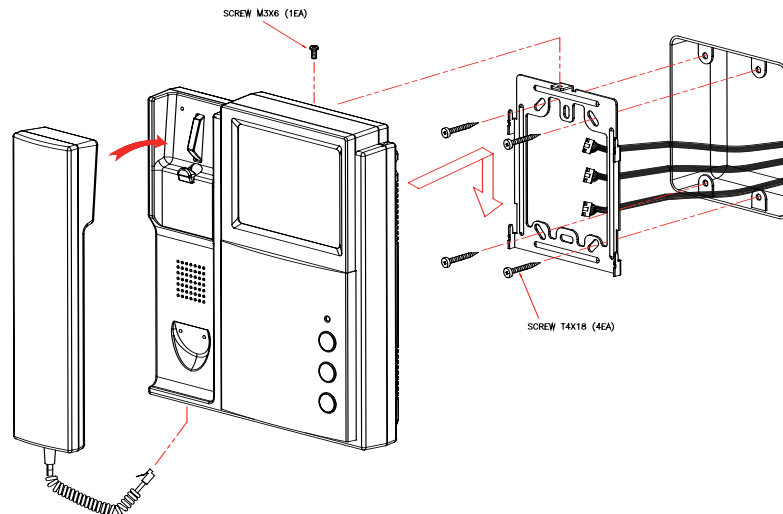

### \* Note:

- Do not install near magnetic activity, humid temperatures, extreme heating conditions, under direct sunlight as these may damage the condition and performance of the products.
- The position of the unit's body should fit the standard height from the range which is recommended to be from 1450mm ~ 1500mm.

### Installation method of a camera unit.

### \* Note:


- Do not install the camera where it is exposed to direct sunlight.
- Keep cleaning up its lens to capture good views.

## 4. Wiring

### \* Wires descriptions of camera.

1. Red: Voice
2. Blue: GND
3. Yellow: Power(+12V)
4. White: Video


### - DPV-4HP2 -

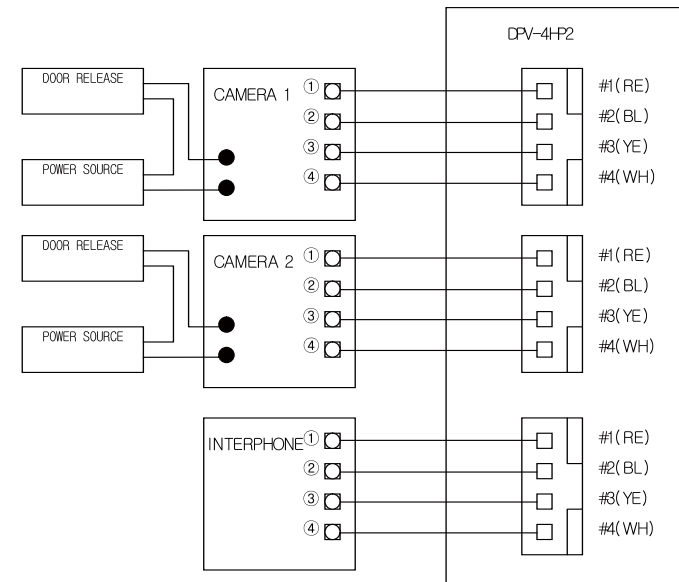

**\* Wiring precautions**

1. If high voltage cables are present in the vicinity, use a coaxial cable with metal outer casing.
2. If any internal wires is exposed through mis-wiring, it may cause a short and become a cause of malfunction or fire.
3. When connecting the monitor and camera, make sure that the monitor power is off.  
(turn on the power after plugging the AC power cord into the outlet)


## 5. Parts list

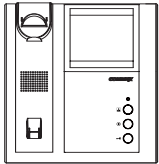

Monitor(main unit)



 Mounting bracket



User's guide



Handset



Mounting screw



screw  
(for monitor)



4 pin  
connector

## 6. Specifications

<b>Model</b>	<b>DPV-4HP2</b>
Rating Voltage	AC 100 -240V~, 50/ 60Hz
Consumption	operation : 14W
Wiring method	To a Camera unit : 4 wires polarity, To an Interphone : 4 wires polarity
Monitor	4" CRT
Communication method	Full duplex (Handset)
Call tone	Call sound from camera: electronic chime, Interphone : electronic buzzer
Monitor Display	90 ±20sec
Distance from Camera	28m(Ø 0.5)/ 50m(Ø 0.65)/ 70m(Ø 0.8)
Working Temperature	0 ~ +40°C (32°F ~ 104°F)
Weight	1.2Kg
Dimension(mm)	189(W) × 208(H) × 56.5(D)